

MOUNTING INSTRUCTION

No. 148733/00
Dat. 2005-02-01

Damper for Extractor Arm Standard

N.B.

The Wall Bracket must be screwed on the wall before the damper is fitted. Otherwise it is not possible to fit the fixing screw nearest the damper.

Fit the damper in the following way:

1. Put the axle through the hole in the 90°-bend.
2. Fasten the damper blade with three screws and nuts.
3. Fasten the disk with screws.
4. Cable connection for automatic fan control (connect the cable to a fan relay)

